


# MODEL 50 POWER TAKE-OFF

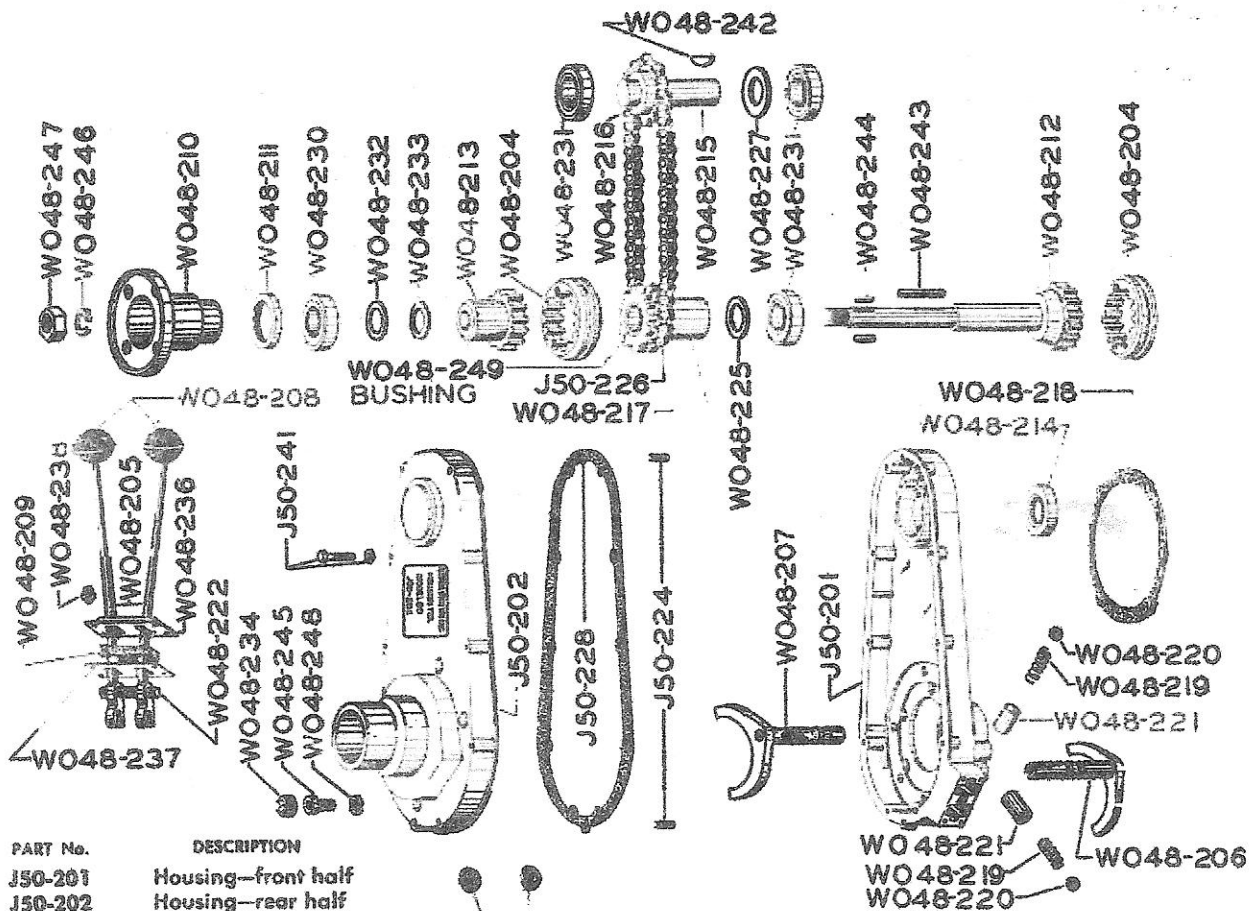

PART No.	DESCRIPTION
J50-201	Housing—front half
J50-202	Housing—rear half
J50-203	Housing Assembly
WO48-204	Sliding Ring (2 req.)
WO48-205	Lever (2 req.)
WO48-206	Shifter—to engine
WO48-207	Shifter—for winch
WO48-208	Knobs (2 req.)
WO48-209	Felt oil retainer for levers
WO48-210	Coupling
WO48-211	Oil Seal—2" OD x 1 1/2" ID
WO48-212	Main P.T.O. Shaft
WO48-213	Clutch Gear Hub
WO48-214	Oil Seal—1 7/8" OD x 1" ID
WO48-215	P.T.O. Shaft—1" x 3/8"
WO48-216	Sprocket—16 tooth
WO48-217	Clutch Sprocket Hub
WO48-218	Gasket—Between P.T.O. and transmission
WO48-219	Spring (2 req.)
WO48-220	Ball (2 req.)
WO48-221	Bushing for shifter ball and spring (2 req.)
WO48-222	Pin
J50-224	Dowel Pins (2 req.)
WO48-225	Thrust Washer—1" x 1 3/8" x .040"
J50-226	Roller Chain and connecting link
WO48-227	P.T.O. Shaft Spacer—1" x 1 3/8" x .189"
J50-228	Gasket—Between Housing
WO48-230	Ball bearing—3/8" ID

PART No.	DESCRIPTION
WO48-231	Ball bearing—1" ID (3 req.)
WO48-232	Shim—.010" thick brass (2 req.)
WO48-233	Shim—.046" thick (2 req.)
WO48-234	3/8" pipe plug (5 req.)
WO48-236	Shifter plate—top
WO48-237	Shifter plate—bottom
WO48-238	Shifter Plate Screws and Washer (4 req.)
WO48-239	Connecting Link
WO48-240	Set screw for WO48-216 sprocket
WO48-241	Cap Screw
WO48-242	Woodruff Keys—#15
WO48-243	Key—for WO48-213
WO48-244	Key—for WO48-210
WO48-245	Socket cap screws (5 req.)
WO48-246	Lock washer
WO48-247	Nut—3/8" N.F.
WO48-248	Lock washer—3/8" Hi-Collar (5 req.)
WO48-249	Bronze bushing—1" x 1 1/8" x 1 1/4" (2 req.)

This power take-off is lubricated from transfer case by oil passage holes. Check oil level in transfer case after operating a short time.