


OUTSIDE
KEYWAY
CLOSED

MODEL 51 POWER TAKE-OFF

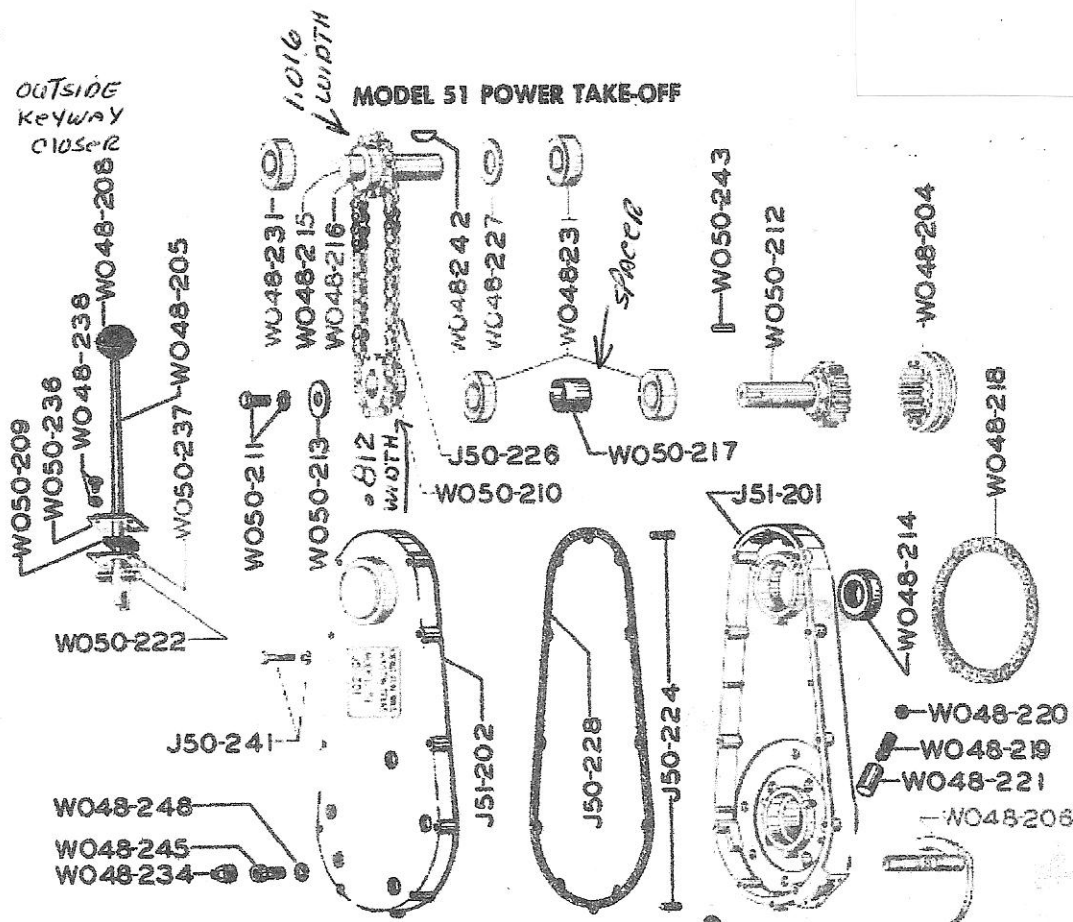

PART No.	DESCRIPTION
J51-201	Housing—front half
J51-202	Housing—rear half
J51-203	Housing Assembly
WO48-204	Sliding Ring
WO48-205	Lever
WO48-206	Shifter
WO48-208	Knob
WO50-209	Felt Oil Retainer
WO50-210	15 Tooth Sprocket
WO50-211	Retaining Bolt and Washer
WO50-212	Main P.T.O. Shaft
WO50-213	Retaining Washer
WO48-214	Oil Seal
WO48-215	P.T.O. Shaft
WO48-216	16 Tooth Sprocket
WO50-217	Main Shaft Spacer
WO48-218	Gasket—P.T.O. to Transmission
WO48-219	Spring
WO48-220	Ball
WO48-221	Bushing
WO50-222	Pin
J50-224	Dowel Pin (2 req.)
J50-226	Roller Chain and Link
WO48-227	P.T.O. Shaft Spacer
J50-228	Housing Gasket
WO48-231	Ball Bearing (4 req.)

PART No.	DESCRIPTION
WO48-234	3/8" Pipe Plug (5 req.)
WO50-236	Top Shifter Plate
WO50-237	Bottom Shifter Plate
WO48-238	Shifter Plate Screws (4 req.)
WO48-239	Connecting Link
WO48-240	Set Screw for WO48-216
WO48-241	Cap Screw
WO48-242	Woodruff Key No. 15
WO50-243	Key
WO48-245	Socket Cap Screw (5 req.)
WO48-248	Lock Washer—HiCollar (5 req.)

This power take-off is lubricated from transfer case by oil passage holes. Check oil level in transfer case after operating a short time.

BEARINGS ALL THE SAME
1641-2RS